


SO-L-0520

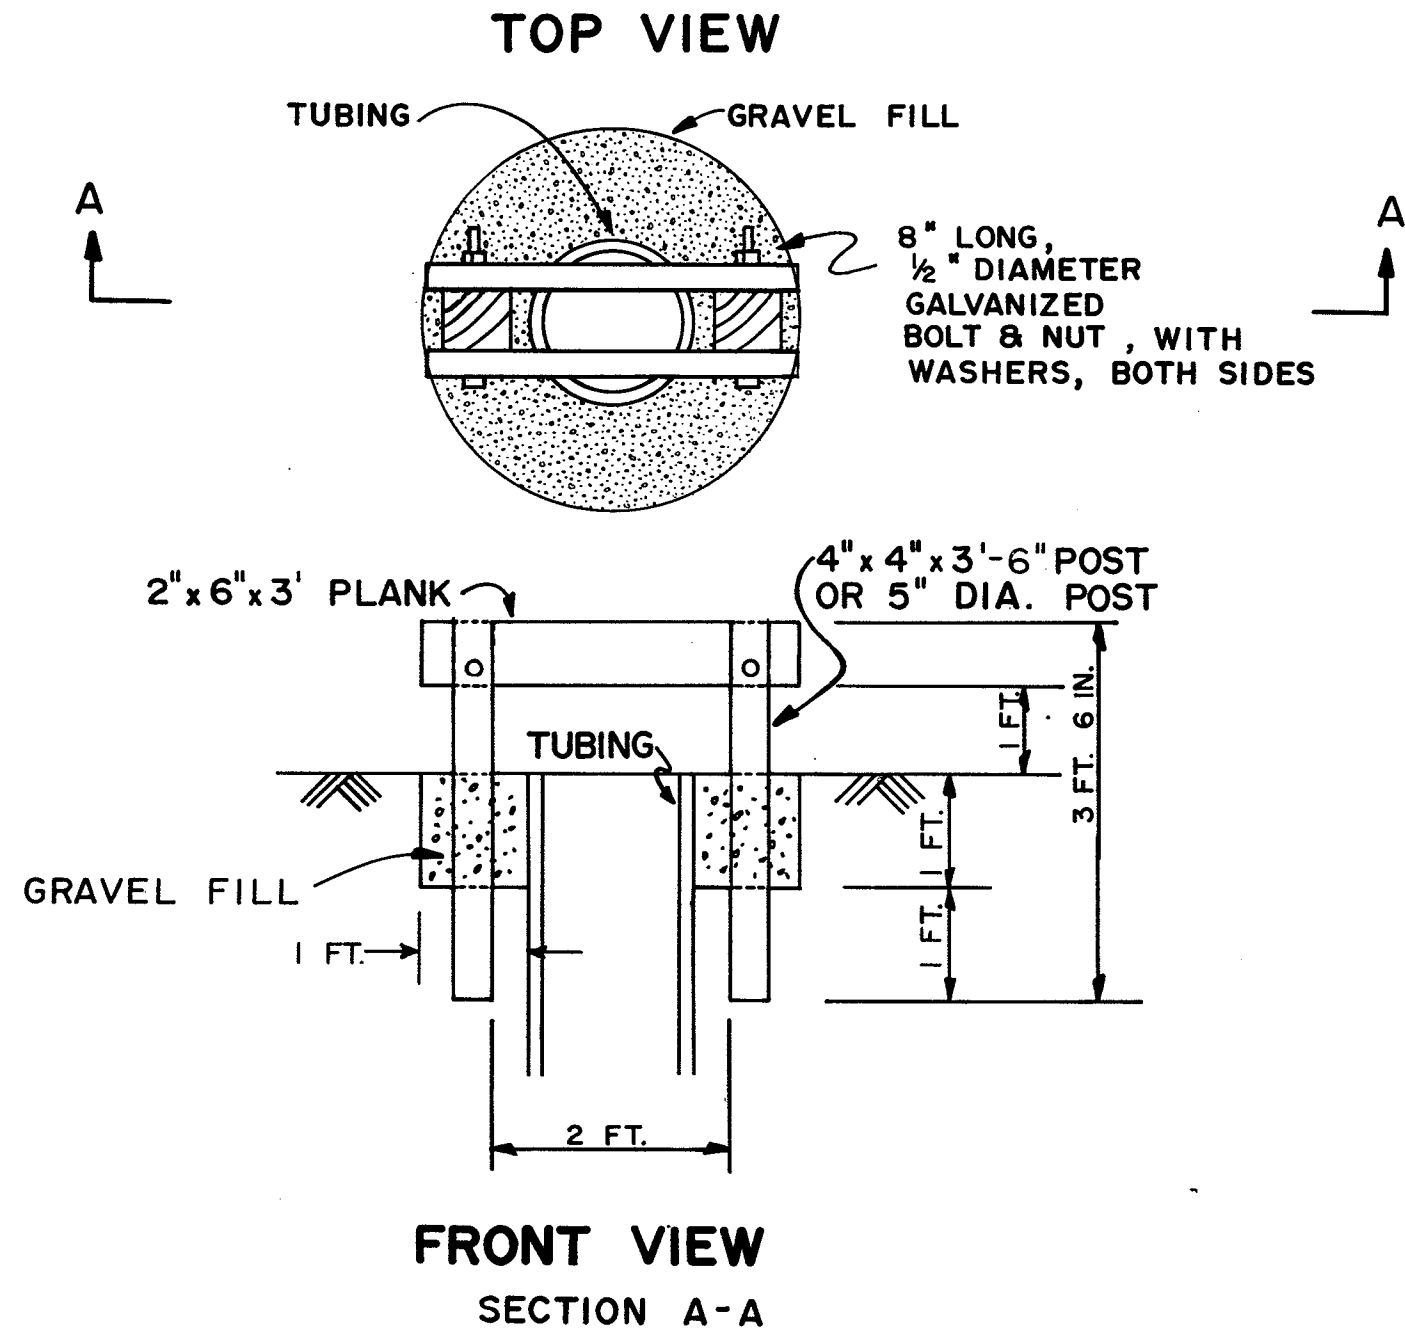

NOTES:

1. LUMBER SHALL BE TREATED TO PREVENT DECAY.
2. INSTALL RACK AFTER TUBING IS PLACED AND BACKFILL TAMPED.
3. PLACE GRAVEL AFTER INSTALLATION.
4. USE THE SAME SIZE RACK FOR ALL INLETS.

GUARD RACK FOR CORRUGATED PLASTIC TUBING INLET

REV. 2 / 82

MICHIGAN ENGINEERING STANDARD DRAWING		
APPROVED BY <i>H.W. Belcher</i>	S.C.E.	DATE 2/26/02
DRAWING NO SO-L-0520		SHEET 1 OF 1

U.S. DEPARTMENT OF AGRICULTURE SOIL CONSERVATION SERVICE	
Designed	Approved by
Drawn	Title
Traced	Sheet No.
Checked	Drawing No.